


ARI2040 Bottom Outlet Ball Valve

INSPECTION & MAINTENANCE BULLETIN

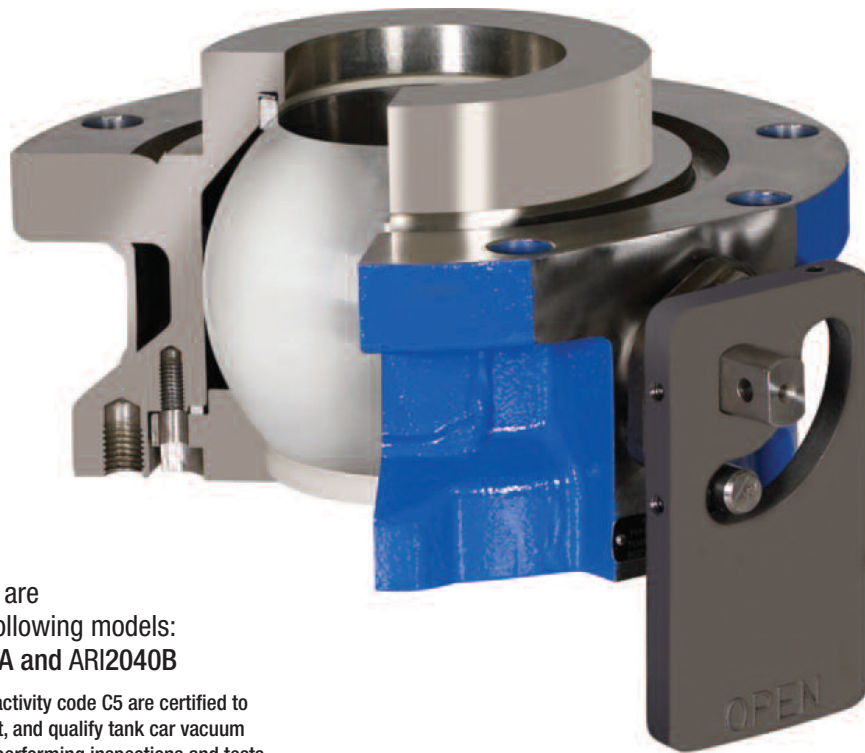

These instructions are applicable to the following models:
ARI2040, ARI2040A and ARI2040B

Only facilities with AAR activity code C5 are certified to recondition, repair, retest, and qualify tank car vacuum relief valves. Personnel performing inspections and tests must be certified to a minimum of Level II per AAR Manual of Standards and Recommended Practices, M-1002.

THE GREENBRIER COMPANIES
One Centerpointe Drive, Suite 200
Lake Oswego, Oregon 97035
info@gbrx.com

www.gbrx.com

THE
GREENBRIER
COMPANIES

Original Date: August 15, 2023
Revision Letter: A
Revision Date: March 17, 2025


New Valves for Replacement of Existing Equipment

New valves are tested, sealed and packaged at the time of manufacture. A new valve can be applied provided it is still in its original packaging.

Valve Rating

The ARI2040, ARI2040A, and ARIs2040B Bottom Outlet Valves are rated to max operating pressure and 300° F.

Disassembly Procedures

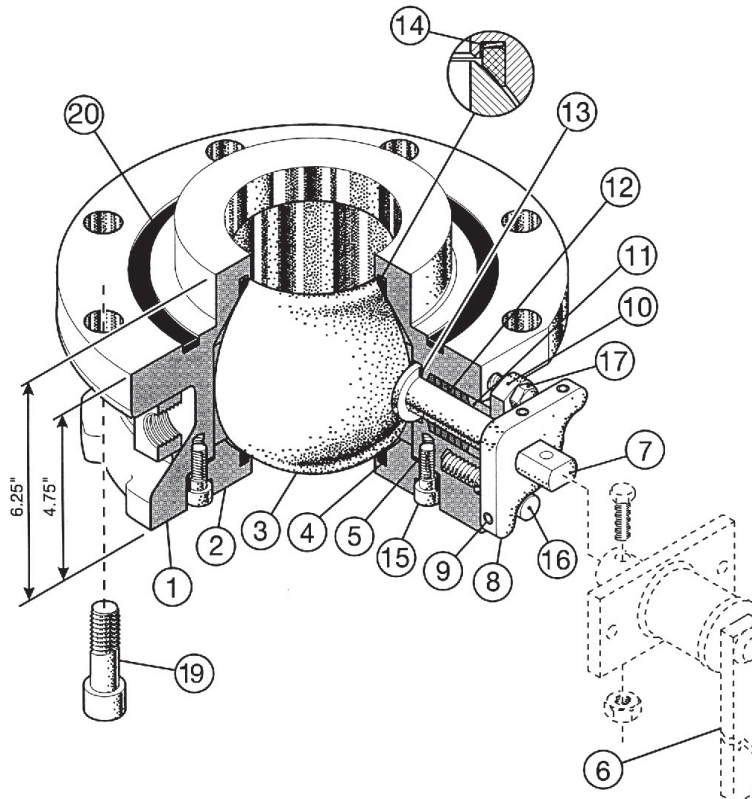

1. Remove the gasket (item #20) by inserting a gasket removal tool along the outer wall and prying underneath the gasket, taking care not to gouge or mar the metal surfaces.
2. The illustration above shows the valve open in the as installed position. Turn the entire valve assembly over to continue disassembly.
3. Loosen the set screw (item #9) and remove the stop (item #8) from the stem (item #7).
4. Remove the two packing retainer bolts (item #17) then remove the retainer (item #10) and the packing gland (item #11).
5. Remove the eight cap screws (item #15) from the cover (item #2). Then remove the cover.
6. Remove the cover gasket (item #5), taking care not to gouge or mar the metal surfaces.
7. Rotate the ball (item #3) to the closed position.
8. Lift the ball (item #3) out of the valve body (item #1), taking care not to gouge or mar the spherical surface.
9. Remove the stem (item #7) and the stem gasket (item #13) from the inside of the valve body. Remove the packing rings (item #12) from the outside of the valve body. The stem gasket and packing rings should be discarded and replaced with new components.

Inspection of Valve Components

1. Remove the seal rings (item #4) and the spring washer (item #14) by using either a gasket removal tool or other sharp instrument taking care not to gouge, or mar the metal surfaces.
2. If necessary, clean the internal and external valve body (item #1) and the cover seal pockets with a light gauge wire brush or light media blast.
3. Inspect the sealing surfaces on the body (item #1), cover (item #2), and stem (item #7) for signs of corrosion, voids, cracks, and scratches. These surfaces include the internal and external seal pockets of the body and cover, and the seal areas that the stem gasket (item #13) and packing rings (item #12) seal onto in the stem bore area.
4. Outside the sealing areas the defects must not exceed 1/16" in depth and 3/32" in width. Additionally, a maximum of one void per square inch is allowable, and the void area must not exceed 10% of total surface.
5. Clean the ball (item #3) with a commercial cleaning solution, rubbing alcohol, or in an ultrasonic bath to remove any residue.
6. Inspect the ball spherical surface for irregularities in the form of scratches or gouges. Scratches or gouges can be evaluated by sliding a copper pick tool over the affected area. If a copper pick tool "catches," the depth of the discontinuity could damage the ball seals (item #4) resulting in improper sealing of the valve. Replace the ball (item #3) as it cannot be repaired.
7. Clean the valve body, cover, stem, and packing gland (item #11) with a commercial cleaning solution, rubbing alcohol, or in an ultrasonic bath.
8. Bolts should be cleaned using a wire brush.

Reassembly

1. Insert a new spring washer (item #14) in the body (item #1) with the inside diameter edge facing upward toward the ball (item #3). Insert a seal (item #4) on top of the spring washer.
2. Slide the new stem gasket (item #13) over the stem (item #7) and insert the stem into the body (item #1). Orient the stem (item #7) so that the slot in the ball (item #3) will engage the stem when inserted.
3. Carefully lower the ball (item #3) into the body cavity.
4. Inspect the seal (item #4) to ensure it remained seated in the seal groove.
5. Slide the packing rings (item #12) over the stem followed by the packing gland (item #11) then the retainer (item #10). Apply a light coating of antiseize lubricant to the retainer bolts (item #17), apply the nuts and tighten evenly to 5-10 ft/lbs.
6. Apply a thin coating, not more than 1/32" of Nordstrom 555 sealant to the bottom surface of the second ball seal (item #4) then insert the seal into the cover (item #2) seat pocket. Do not apply excessive sealant as it could adversely affect the operation of the valve.
7. Install a new cover gasket (item #5).
8. Align the bolt holes in the cover (item #2) and valve body (item #1) then lower the cover into place taking care to ensure that the seal (item #4) does not slip out of position.
9. Apply a light coating of antiseize lubricant to the eight cap screws (item #15) and place them in the cover (item #2). Torque using a diametrically opposite (criss-cross) tightening sequence to 30 +/- 2 ft/lbs in at least 3 stages.
10. Slip the stem stop (item #8) over the stem (item #7) and tighten the set screw (item #9) to 11 +/- 2 ft/lbs.
11. Avoiding quick or jerky movements, partially cycle the valve open and closed 6 to 8 times, then cycle fully open and closed 3 times to seat the seals. Some resistance to rotation is normal.
12. The opening in the ball should be concentric with the opening in the valve cover (item #2). If not, adjust the set screw (item #9) against the stop bolt (item #16) until the ball is concentric.
13. Leave valve in the open position and install protective caps into both ports.

Test Procedure

1. Per the following procedure, leak test the valve in the valve closed, half-open and full open positions using an approved bubble leak test procedure.
2. Valve should be tested in closed, half-open, and open position.

After Testing

1. Remove the plug or flange used to seal the discharge opening in the valve cover.
2. Blow the valve dry with compressed air.
3. Fully open the valve and install a protective cap in both ends.
4. Remove the valve from the test fixture.
5. Turn the valve over and install a protective cap.
6. Store the valve in a cardboard box or protective enclosure.
7. Record the results of the test on the approved leak test form.
8. Mark and place the tested valve in appropriate storage.

The undertaking of repair or replacement by the Purchaser, or its agents, without the expressed written consent of The Greenbrier Companies (GBX) shall void the warranty and relieve GBX of all responsibility. Under no circumstances shall GBX be liable for any direct, incidental, consequential or other damages of any kind in connection with the installation, operation, maintenance, repair, inspection or other use of any product purchased from it.